



Hardware locations shown match DOMINION standard doors
Single rabbet profiles are shown, double rabbet and cased opening profiles are similar.

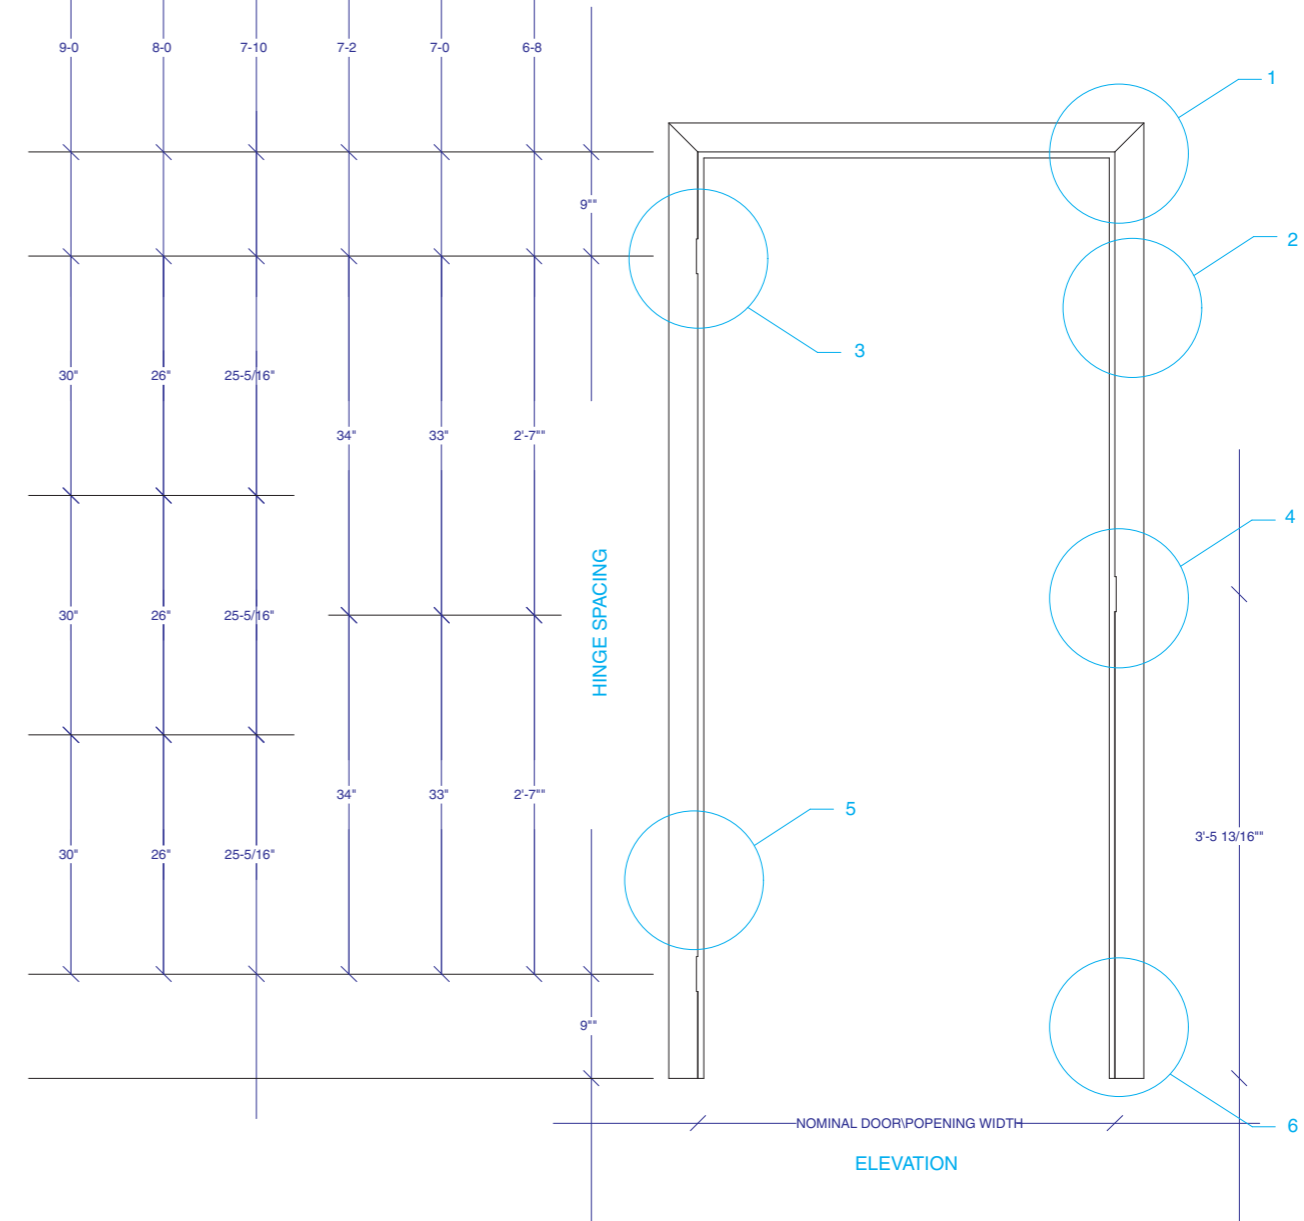

INSTALLATION INSTRUCTIONS


ROUGH OPENING: SINGLE RABBET
DOOR OPENING WIDTH PLUS 2"
DOOR OPENING HEIGHT PLUS 3/4"

STEP 1

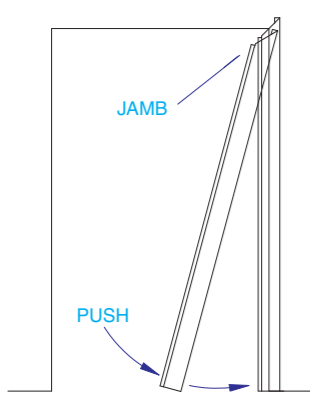


- A. PUSH TOP OF ONE JAMB OVER THE WALL.
- B. HOLD TOP OF JAMB IN PLACE. THEN PUSH BOTTOM IN TOWARDS AND OVER WALL.

STEP 2

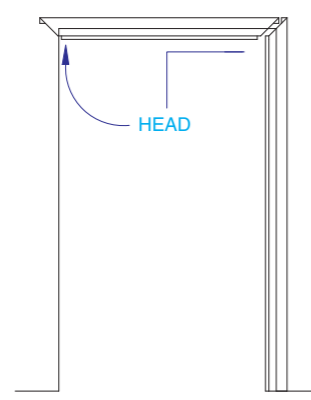


- A. POSITION FRAM HEAD OVER THE WALL.
- B. ALIGN HEAD TABS WITH JAMB SLOTS. THEN SLIDE HEAD TOWARD JAMB AND ENGAGE TABS IN SLOTS.

STEP 3

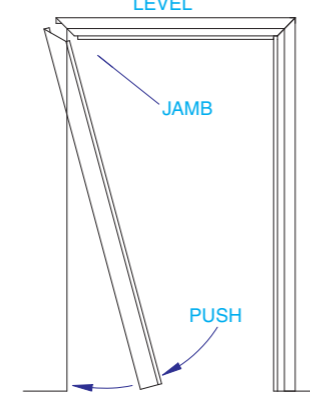

- A. PUSH TOP OF REMAINING JAMB OVER WALL AND MATE TABS IN SLOTS.
- B. PUSH BOTTOM OF JAMB IN TOWARDS AND OVER WALL.
- C. LEVEL HEAD.

STEP 4

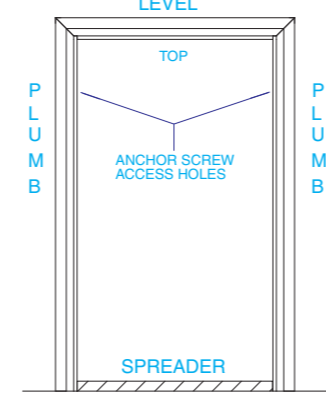

- A. ADJUST PLUMB ANCHORS WITH SCREWDRIVER.
- B. PLUMB HINGE JAMB AND ANCHOR SILL.
- C. WITH TEMPORARY SPREADER, ADJUST STRIKE JAMB AND ANCHOR SILL.
- D. INSTALL MUTES.
- F. SPREADER IS NOT SUPPLIED BUT IT IS RECOMMENDED THAT ONE IS USED TO MAKE PLUMBING OF SIDE JAMBS EASIER.

NOTES: DOOR INSTALLATION INSTRUCTIONS

PANEL-BUILT		I N C
DOOR INSTRUCTIONS		
DATE: 5/3/2001		Phone: 706-745-6540
THIS DRAWING IS THE PROPERTY OF PANEL-BUILT, INC. AND MAY NOT BE USED WITHOUT EXPRESS WRITTEN PERMISSION OF PANEL-BUILT, INC. ALL INFORMATION SHOWN ON THIS DRAWING IS THE PROPERTY OF PANEL-BUILT, INC. AND MAY NOT BE USED IN WHOLE OR PART WITHOUT SPECIFIC WRITTEN PERMISSION OF PANEL-BUILT, INC.		Designed: J. Wallace
FAX: 706-745-1450		Checked: T. Breland/J. Mcpherson
PAGE 1 OF -		Approved:
		Revision: A